


SSR ABS System Heat Shield Installation Notes

1. Slide a jack under the left front frame horn (where you normally hit a parking curb) and lift the front of the truck about 8-10". Slip a jack stand into a convenient location for safety.
2. Slide under the driver's side, just behind the front wheel with your head about even with the transmission. Looking up, you will see the ABS system in between the left catalytic converter and the frame. See the photos below for reference.



3. Take the hardware off of the back "foot" on the heat shield and the nut off of the front heat shield bolt.
4. Slide the heat shield in place, with the "foot" sitting on top of the frame, slide the bolt through the hole in the front corner of the ABS bracket and put the nut back onto it. (see photos below)
5. Put the bolt and one large flat washer up to the large hole in the frame and through the mount hole in the "foot" of the shield. Install the second large flat washer and nut on top. (see photos below)
6. Tighten up the two nut/bolt sets until they are snug.
7. Get out from under the truck and let it back down..... you're done.

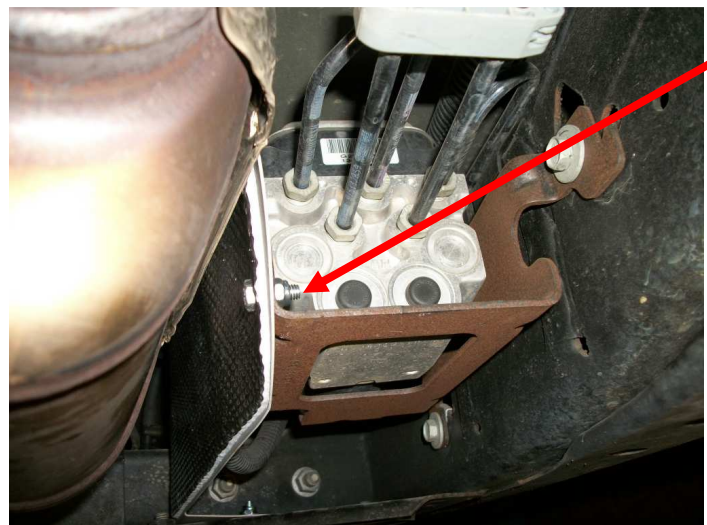

My Best Regards,

Mike Moro
Simple Engineering, LLC

8/8/2013